


SKU:SEN0240 (<https://www.dfrobot.com/product-1661.html>)

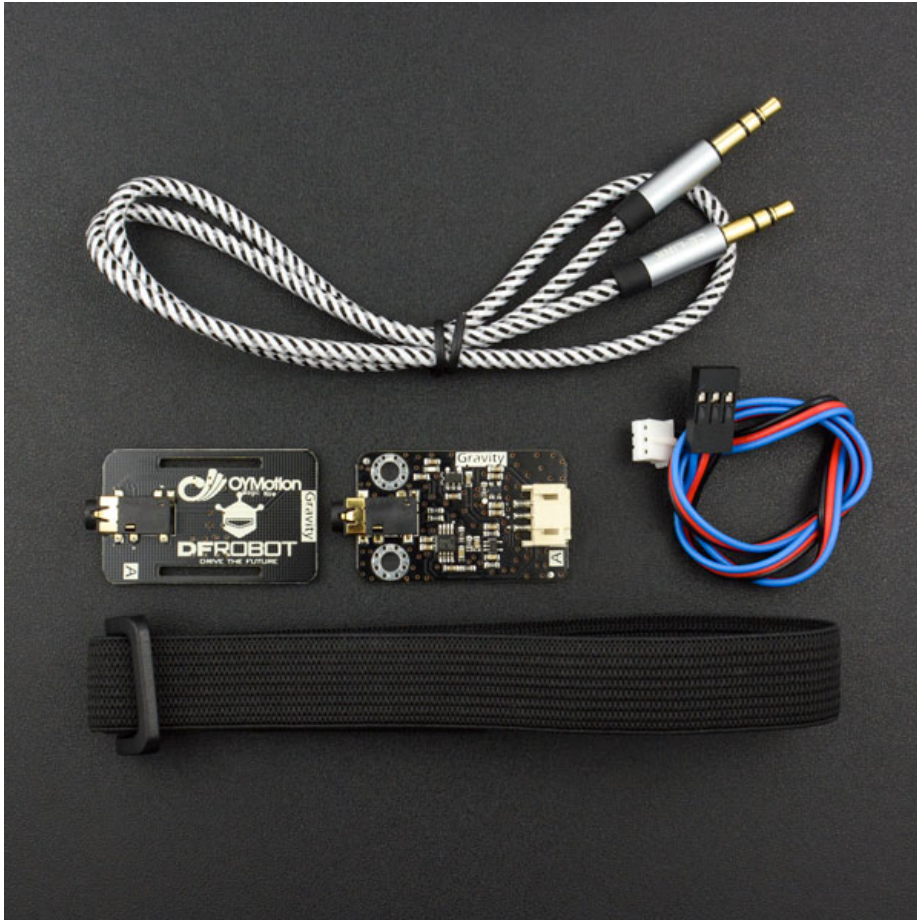

([https://www.dfrobot.com/product-](https://www.dfrobot.com/product-1661.html)

1661.html)

Introduction

The EMG sensor is cooperatively launched by DFRobot and OYMotion, and can reflect muscle and neural activities of human by detecting sEMG. This sensor integrates a filtering circuit and an amplified circuit. It amplifies minimal sEMG within $\pm 1.5\text{mV}$ 1000 times and depresses noises (especially power frequency interference) by differential input and analog filter circuit. The output signal is analog, which takes 1.5V as the reference voltage. The output voltage range is 0~3.0V. The signal strength depends on muscle activities. The output signal waveform indicates the muscle activity and helps to analyse and research the sEMG signals. Specifically, we can use Arduino as a controller to detect muscle activities, e.g. check whether the muscle is tense; the muscle strength; etc. This active induction sensor can provide high quality signal collection and it is easy to use. Simple preparations are needed to apply the module to both static or dynamic areas. The dry electrode must be applied to the module and good quality signals can be read even without conductive gel. Compared with disposable conductive gel needed by medical electrodes, it is more convenient to use our dry electrode and has longer service life. Therefore, it is more suited to common users. Measurements with an analog EMG sensor are noninvasive, convenient and can be applied to an array of human-computer interactions. With the development of microcontrollers and integrated electric circuits, EMG circuits and sensors have not just been applied to traditional medical muscle detection researches but also control systems.

The supply voltage range is 3.3~5.5V; The supply current should not be less than 20mA; The ripple current and disturbance current should be as low as possible. Stabilized DC voltage is recommended.

The effective spectrum range is 20Hz ~ 500Hz, and the ADC converter which has higher than 8-bit resolution and 1 KHz frequency are recommended to take samples and digitized to keep original information.


Placing the metal dry electrode should consistent with the direction of muscle.

The product is not a professional medical device and cannot diagnose and cure disease as an assistant device.

Specification

- **Signal Transmitter Board**
 - Supply Voltage: +3.3V ~ 5.5V
 - Operating Voltage: +3.0V
 - Detection Range: +/-1.5mV
 - Electrode Connector: PJ-342
 - Module Connector: PH2.0-3P
 - Output Voltage: 0 ~ 3.0V
 - Operating Temperature: 0 ~ 50°C
 - Size: 22mm*35mm (0.87inch*1.38inch)
- **Dry Electrode Board**
 - Electrode Connector: PJ-342
 - Wire Length: 50cm(19.69inch)
 - Plate Size: 22 * 35 mm(0.87inch*1.38inch)
 - weight: 36g

Board Overview

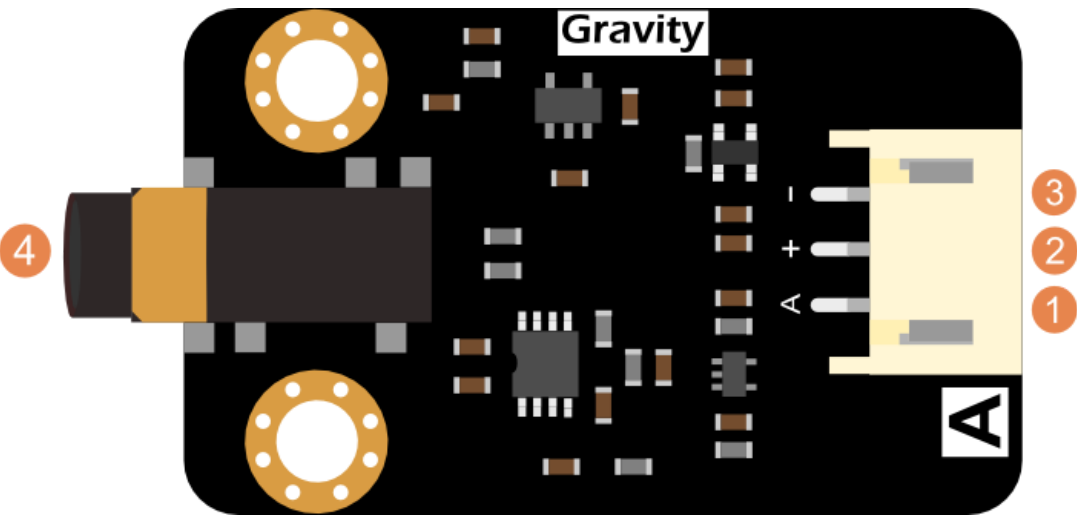

Num	Label	Description
1	A	Analog Signal Output(0~3.0V)
2	+	Power Supply Anode(3.3~5.5V)
3	-	Power Supply Cathode(0V)
4	PJ-342	Probe Wiring Connector

Tutorial


The tutorial will show you how to use the analog EMG sensor by printing electromyogram waveform with Serial Plotter of Arduino IDE.

Requirements

- **Hardware**

- DFRduino UNO R3 (<https://www.dfrobot.com/product-838.html>) (or similar) x 1
- Signal Transmitter Board x1
- Dry Electrode Plate x1
- Dry Electrode Cable x1
- Gravity Analog Cable 3Pin (or Dupont Wires) x1
- **Software**
 - Arduino IDE (<https://www.arduino.cc/en/Main/Software>) Click to Download Arduino IDE from Arduino®.

Connection Diagram

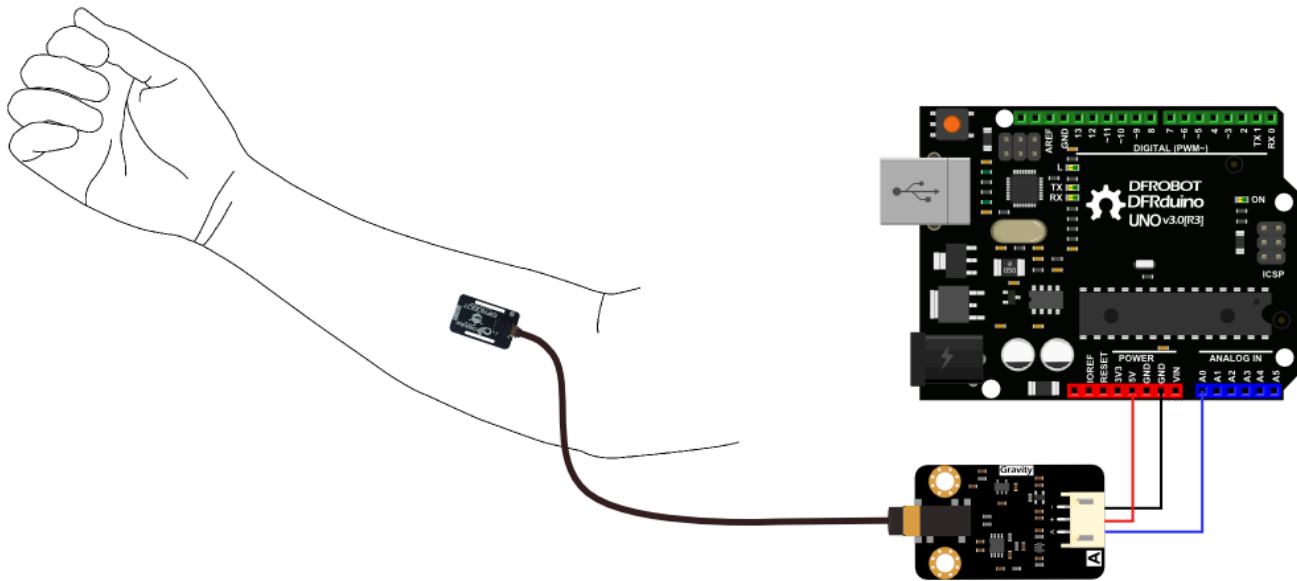

Sample Code

This sample code needs EMGFilters library file, please download and install the EMGFilters Library (https://codeload.github.com/yuyouliang/EMG_Filter/zip/master) file. How to install Libraries in Arduino IDE? (<https://www.arduino.cc/en/Guide/Libraries#UxU8mdzF9H0>)

```

/*
 * Copyright 2017, OYMotion Inc.
 * All rights reserved.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 *
 * 1. Redistributions of source code must retain the above copyright
 *    notice, this list of conditions and the following disclaimer.
 *
 * 2. Redistributions in binary form must reproduce the above copyright
 *    notice, this list of conditions and the following disclaimer in
 *    the documentation and/or other materials provided with the
 *    distribution.
 *
 * THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS
 * "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
 * LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS
 * FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE
 * COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT,
 * INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,
 * BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS
 * OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED
 * AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY,
 * OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF
 * THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH
 * DAMAGE.
 */

#ifdef ARDUINO && ARDUINO >= 100
#include "Arduino.h"
#else
#include "WProgram.h"
#endif

#include "EMGFilters.h"

#define TIMING_DEBUG 1

#define SensorInputPin A0 // input pin number

EMGFilters myFilter;
// discrete filters must works with fixed sample frequency
// our emg filter only support "SAMPLE_FREQ_500HZ" or "SAMPLE_FREQ_1000HZ"
// other sampleRate inputs will bypass all the EMG_FILTER
int sampleRate = SAMPLE_FREQ_1000HZ;
// For countries where power transmission is at 50 Hz
// For countries where power transmission is at 60 Hz, need to change to
// "NOTCH_FREQ_60HZ"
// our emg filter only support 50Hz and 60Hz input
// other inputs will bypass all the EMG_FILTER
int humFreq = NOTCH_FREQ_50HZ;

// Calibration:
// put on the sensors, and release your muscles;
// wait a few seconds, and select the max value as the threshold;
// any value under threshold will be set to zero
static int Threshold = 0;

unsigned long timeStamp;
unsigned long timeBudget;

```

```

void setup() {
  /* add setup code here */
  myFilter.init(sampleRate, humFreq, true, true, true);

  // open serial
  Serial.begin(115200);

  // setup for time cost measure
  // using micros()
  timeBudget = 1e6 / sampleRate;
  // micros will overflow and auto return to zero every 70 minutes
}

void loop() {
  /* add main program code here */
  // In order to make sure the ADC sample frequency on arduino,
  // the time cost should be measured each loop
  /*-----start here-----*/
  timeStamp = micros();

  int Value = analogRead(SensorInputPin);

  // filter processing
  int DataAfterFilter = myFilter.update(Value);

  int envelope = sq(DataAfterFilter);
  // any value under threshold will be set to zero
  envelope = (envelope > Threshold) ? envelope : 0;

  timeStamp = micros() - timeStamp;
  if (TIMING_DEBUG) {
    // Serial.print("Read Data: "); Serial.println(Value);
    // Serial.print("Filtered Data: ");Serial.println(DataAfterFilter);
    Serial.print("Squared Data: ");
    Serial.println(envelope);
    // Serial.print("Filters cost time: "); Serial.println(timeStamp);
    // the filter cost average around 520 us
  }

  /*-----end here-----*/
  // if less than timeBudget, then you still have (timeBudget - timeStamp) to
  // do your work
  delayMicroseconds(500);
  // if more than timeBudget, the sample rate need to reduce to
  // SAMPLE_FREQ_500HZ
}


```

Calibration



Calibration is recommended for every time when you use it, for the EMG signal is different in different position, even on the same person.


1. Modify the variable **Threshold** in the sample code to 0, namely: **static int Threshold = 0;**
2. Upload the sample code to Arduino control board and open the serial monitor of Arduino IDE to check the printed value.
3. Relax the arm muscle and check the printed value of serial port. Calm down and relax for a while to check and record the maximum value printed by the serial monitor. If the value is too large, such as more than 1000, you can try fine-tune position of the dry electrode.

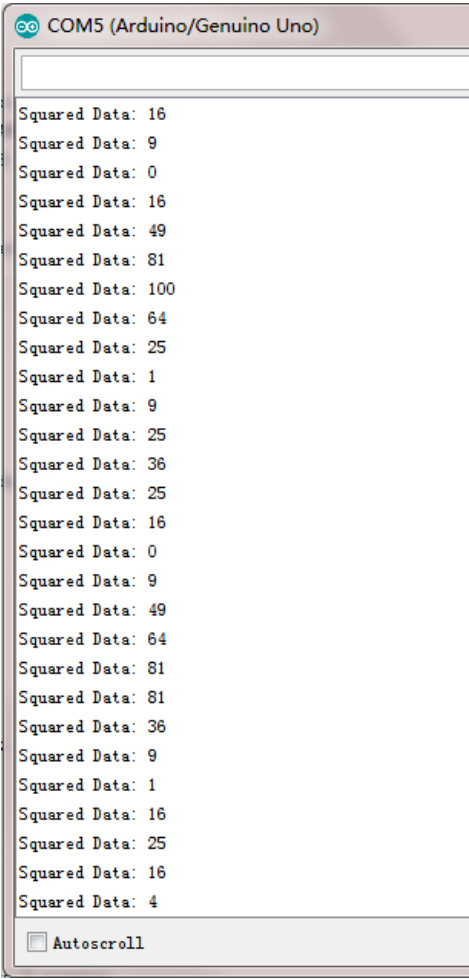


4. Modify the variable **Threshold** in the sample code to the recorded maximum value, and reload the sample code to Arduino control board.

5. Open the serial plotter of arduino IDE and the myoelectricity waveform could be seen.

In general, the waveform is a line of 0 when the muscle is relaxed, shown as below. It is normal along with occasional peak waveform.

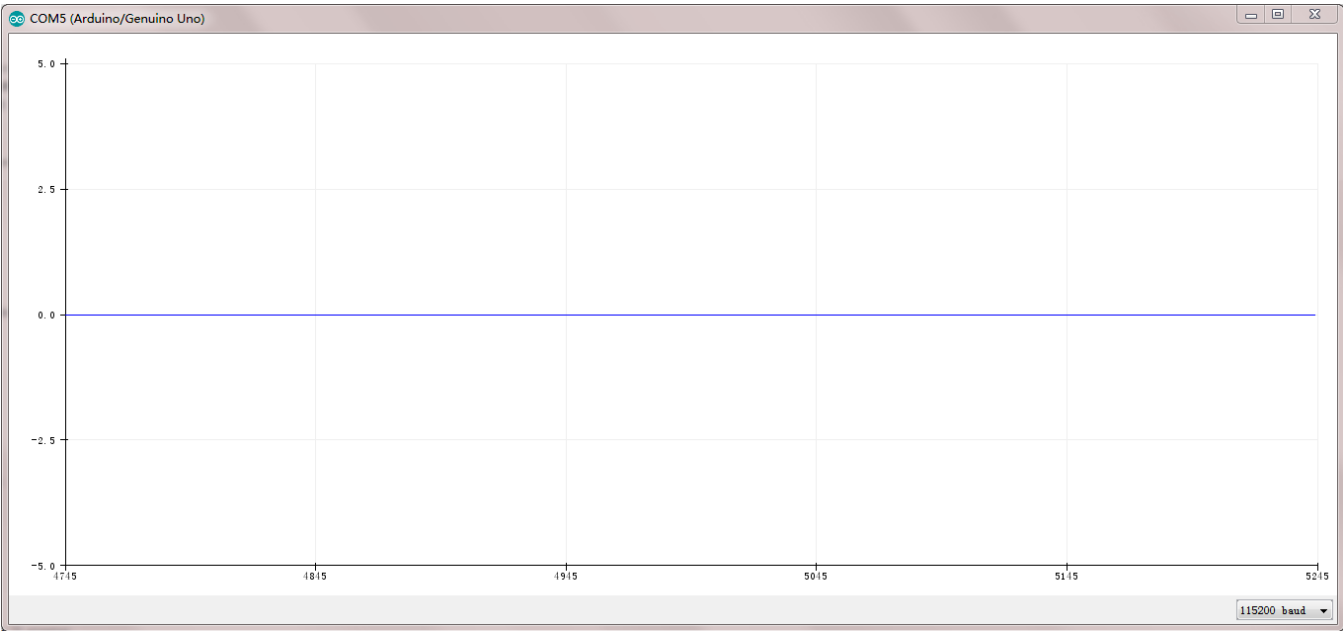

Obviously myoelectricity waveform could be seen in the process of making a fist, shown as below.

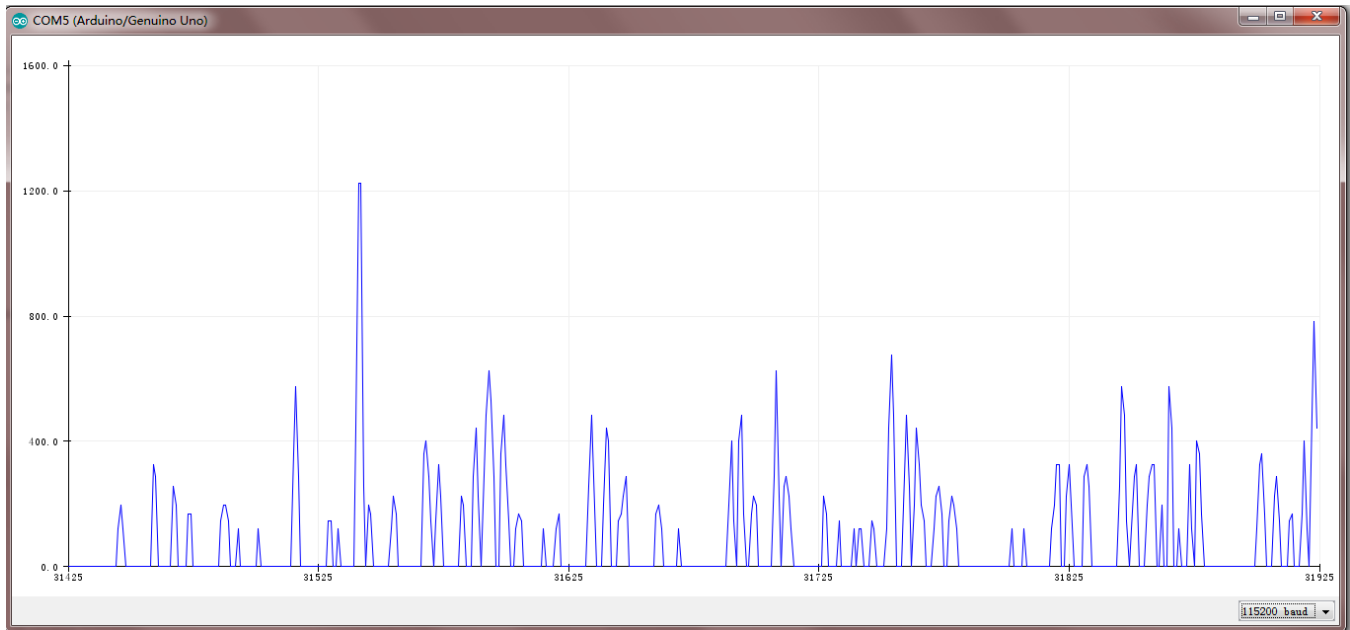

Basic Application

This application explains the way to distinguish whether the EMG signal from making a fist. It can be expanded to be applied to push-up counts, dumbbell curl counts, etc. It also can be applied to human-computer interaction, such as play Flappy Bird with EMG signal made by a fist. Please refer to the Chapter 4: 4.1 Preparation and 4.2 Connection Diagram for hardware connection and sensor position. This sample code needs EMGFilters library file, please download and install the EMGFilters Library (https://codeload.github.com/yuyouliang/EMG_Filter/zip/master) first. How to install Libraries in Arduino IDE? (<https://www.arduino.cc/en/Guide/Libraries#.UxU8mdzF9H0>)

```

/*
  Copyright 2017, OYMotion Inc.
  All rights reserved.

  Redistribution and use in source and binary forms, with or without
  modification, are permitted provided that the following conditions
  are met:
  1. Redistributions of source code must retain the above copyright
  notice, this list of conditions and the following disclaimer.
  2. Redistributions in binary form must reproduce the above copyright
  notice, this list of conditions and the following disclaimer in
  the documentation and/or other materials provided with the
  distribution.

  THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS
  "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
  LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS
  FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE
  COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT,
  INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,
  BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS
  OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED
  AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY,
  OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF
  THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH
  DAMAGE.
*/

#ifdef ARDUINO
#include "Arduino.h"
#else
#include "WProgram.h"
#endif

#include "EMGFilters.h"
#define SensorInputPin A0 //sensor input pin number

/*
  Define the `threshold` variable as 0 to calibrate the baseline value of input sEMG signals first.
  After wiring the sEMG sensors to the Arduino board, wear the sEMG sensors. Relax your muscles for a few seconds,
  you will be able to see a series of squared sEMG signals values get printed on your serial terminal.
  Choose the maximal one as the baseline by setting the `threshold` variable. Then rebuild this project.
  The `envelope`, which is the squared sEMG signal data, will be printed to the serial line.
  The developer can plot it using the Arduino SerialPlotter.

  Note:
    After calibration, Any squared value of sEMG signal below the baseline will be treated as zero.
    It is recommended that you do calibration every time you wear the sEMG sensor.
*/
unsigned long threshold = 0; // threshold: Relaxed baseline values.(threshold=0:in the calibration process)
unsigned long EMG_num = 0; // EMG_num: The number of statistical signals

EMGFilters myFilter;
/*
  Set the input frequency.
  The filters work only with fixed sample frequency of
  `SAMPLE_FREQ_500HZ` or `SAMPLE_FREQ_1000HZ`.
  Inputs at other sample rates will bypass
*/
SAMPLE_FREQUENCY sampleRate = SAMPLE_FREQ_500HZ;
/*
  Set the frequency of power line hum to filter out.
  For countries with 60Hz power line, change to "NOTCH_FREQ_60HZ"
*/

```



```

*/
NOTCH_FREQUENCY humFreq = NOTCH_FREQ_50HZ;

void setup()
{
    myFilter.init(sampleRate, humFreq, true, true, true);
    Serial.begin(115200);
}

void loop()
{
    int data = analogRead(SensorInputPin);
    int dataAfterFilter = myFilter.update(data); // filter processing
    int envelope = sq(dataAfterFilter); //Get envelope by squaring the input
    envelope = (envelope > threshold) ? envelope : 0; // The data set below the base value is set to 0, indicating

    /* if threshold=0,explain the status it is in the calibration process,the code bollow not run.
       if get EMG singal,number++ and print
    */
    if (threshold > 0)
    {
        if (getEMGCount(envelope))
        {
            EMG_num++;
            Serial.print("EMG_num: ");
            Serial.println(EMG_num);
        }
    }
    else {
        Serial.println(envelope);
    }
    delayMicroseconds(500);
}

/*
   if get EMG signal,return 1;
*/
int getEMGCount(int gforce_envelope)
{
    static long integralData = 0;
    static long integralDataEve = 0;
    static bool remainFlag = false;
    static unsigned long timeMillis = 0;
    static unsigned long timeBeginzero = 0;
    static long fistNum = 0;
    static int TimeStandard = 200;
    /*
       The integral is processed to continuously add the signal value
       and compare the integral value of the previous sampling to determine whether the signal is continuous
    */
    integralDataEve = integralData;
    integralData += gforce_envelope;
    /*
       If the integral is constant, and it doesn't equal 0, then the time is recorded;
       If the value of the integral starts to change again, the remainflag is true, and the time record will be re-ent
    */
    if ((integralDataEve == integralData) && (integralDataEve != 0))
    {
        timeMillis = millis();
        if (remainFlag)
        {
            timeBeginzero = timeMillis;
            remainFlag = false;
            return 0;
        }
    }
    /* If the integral value exceeds 200 ms, the integral value is clear 0,return that get EMG signal */
    if ((timeMillis - timeBeginzero) > TimeStandard)
    {
        integralDataEve = integralData = 0;
    }
}

```

```


    return 1;
}
return 0;
}
else {
    remainFlag = true;
    return 0;
}
}

```




Calibration is recommended for every time you use it, for the EMG signal is different in different position even of the same person.

1. In this code, the default variable **threshold** is 0, which means in the calibration mode. Modify **threshold** to nonzero means exit the calibration mode. So if you want to re-calibrate the sensor, you just need to modify **threshold** value to 0, namely, **unsigned long threshold = 0;**
2. Upload the code to Arduino control board and open serial plotter of Arduino IDE to check the maximum Y-axis value.
3. Make a fist gently and loose it gently, repeatedly. Then observing and recording the maximum Y-axis value. As shown in the following picture, the result of the maximum should be around 400.

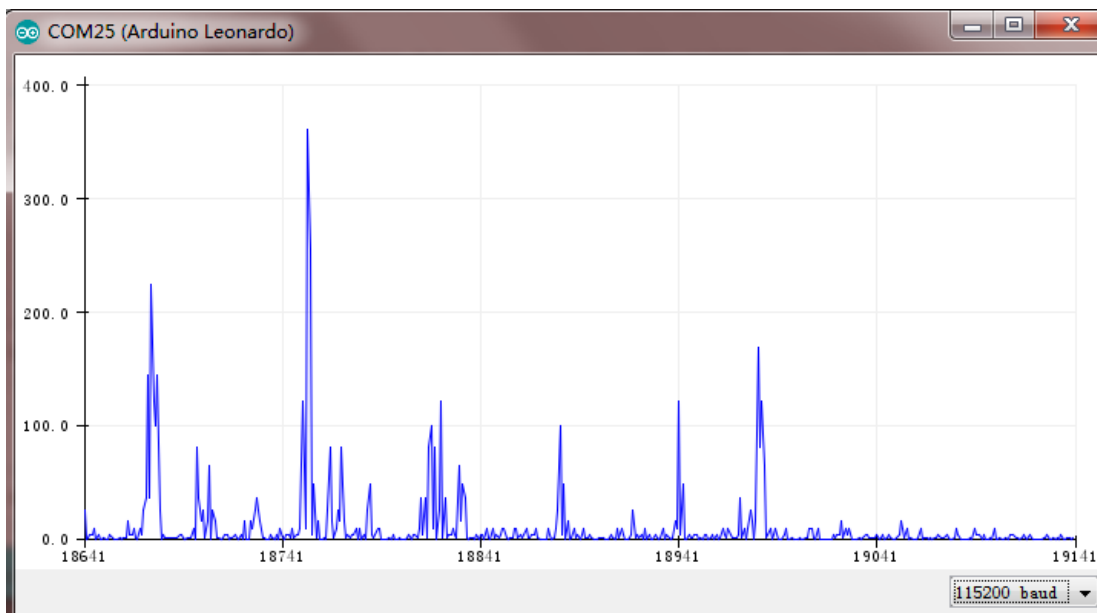

4. Modify the variable **threshold** to the recorded maximum value. Recommend to modify it to the maximum +100 to improve anti-interference. Reload the sample code to the Arduino control board.
5. Open the serial monitor of Arduino IDE, make a fist and loose it for once then you can see the printed value. Making a fist gently will not count and making a fist with more power will not increase the count value. Only a strong fist and loose can make sense. In this way, we realize the precise counts.

If you found the count accumulated when loose the fist, it would be caused by low threshold value. You can add extra 100 on the variable **threshold**, then reloading the sample code to the Arduino control board and check the result. You can repeat this step until the result is satisfied.

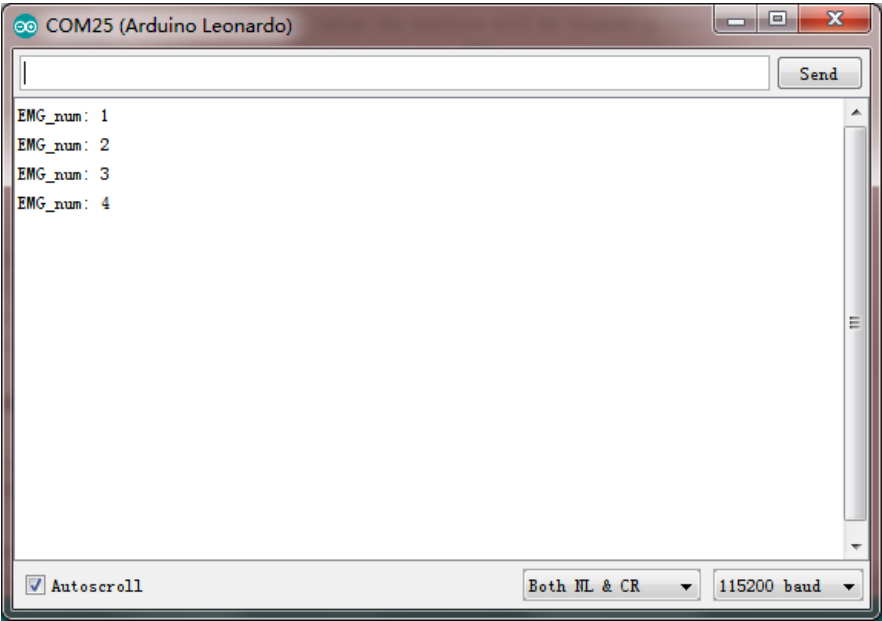

This sensor can count the muscle activities precisely after calibration on a specific point. It can be applied to push-up counts, dumbbell curl counts, etc. It also can be applied to human-computer interaction, such as play Flappy Bird with EMG signal made by fist. Besides the basic function, the analog EMG sensor can also detect muscle activity strength by signal intensity. You can refers to the More Documents in the end page of Wiki.

FAQ

Q&A	Some general Arduino Problems/FAQ/Tips
Q	Where should I put the dry electrode? Is there any special requirement?
A	In general, the corresponding 3 metal dry electrode plate needs not pay attention to the reference voltage. It only need to consistent with the direction of muscle. You can refer to the image as below of the placement.






For any questions, advice or cool ideas to share, please visit the **DFRobot Forum** (<https://www.dfrobot.com/forum/>).

More Documents

- EMGFilters Library (https://codeload.github.com/yuyouliang/EMG_Filter/zip/master)
- New OYMotion EMGFilters Library(github) (<https://github.com/oymotion/EMGFilters>)
- Application Video: Intelligent Muscle Electro-prosthesis (<http://video.tudou.com/v/XMjY5MzUyMzl4NA>)
- OYMotion Official Website (<http://www.oymotion.com/>)

 Get Gravity: Analog EMG Sensor by OYMotion (<https://www.dfrobot.com/product-1661.html>) from DFRobot Store or DFRobot Distributor. (<https://www.dfrobot.com/index.php?route=information/distributorslogo>)

Turn to the Top